

Feilding Aerodrome Vehicle Usage

This document specifically outlines the requirement for vehicle usage on the active areas of Feilding Aerodrome.

This document should be read in conjunction with the latest version of the Feilding Aerodrome Health and Safety manual.

General requirements

Feilding Aerodrome requires vehicle drivers and vehicles operating on operational areas of the Aerodrome to register with Feilding Aerodrome. Feilding Aerodrome will provide a safety briefing and its requirements. The registration form is available on the Feilding Aerodrome website.

Feilding Aerodrome hangar occupiers are requested to ensure that vehicles visiting their premises are parked in such a manner so as not to inhibit the safe taxiing and manoeuvring of aircraft on the aerodrome operational areas.

(Note: If in any doubt vehicles can be directed to park in the fenced parking area which ensures safe separation of vehicles and aircraft).

There is an electronic card controlled entry for vehicles to the apron at the refuelling area. This is for approved drivers only. The barrier arm is operated by a code entered by cellphone. The code is issued by Feilding Aerodrome Inc upon application. This privilege can be withdrawn if access is abused.

Persons or organisations operating vehicles on the operational areas of Feilding Aerodrome are responsible for their own airside liability insurance. Standard vehicle insurance policies may or may not cover vehicle use on aerodrome airside or operational areas.

Areas

The Feilding Aerodrome is split into three specific areas, as described below.

- **Public access - Green**

The public areas include the main driveway, the northern access way and car park and the main car park. No driver registration is required for these areas.

- **Active areas – land side – Yellow**

This area of the aerodrome is restricted to drivers and vehicles that are registered or otherwise approved by the aerodrome committee.

- **Active areas – runways - Red**

This area of the aerodrome is restricted to drivers and vehicles that are registered or otherwise approved by the aerodrome committee and an active airband radio is to be carried, with a listening watch on 124.1 at all times.

